

EC-100 EVERYWHERE COMMUNICATOR


To access the Help Desk for EC-100 support (login required):

<https://everywherecomms.atlassian.net/servicedesk/>

To access the complete EC-100 User Guide:

<https://everywhere-hub.com/v2/ui/app#/resources>

Message Waiting
Message Outbox Count
SOS Indicator
GPS Status
Tracking
Bluetooth Sync Status
Battery Indicator

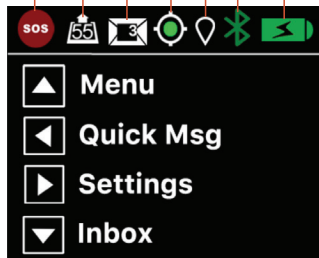

Charging Indicator LED
Display
Back Button
Select Button



Antenna
SOS Button
Mini USB Charging Port Access
Power
Hot Key (Programmable)
Arrow Keys/Keypad Menu

To Quick Charge: plug the device in, power up, but do not press OK.

Send a SOS: STEP 1

Option 1: Press and hold the **SOS Button**, located on the left side of the EC-100, for 3 seconds. The SOS Confirmation screen will appear.

Option 2: Starting from the Main Screen:

1. Press the **Up Arrow** key labeled **Menu**.
2. From **Main Menu** scroll to **SOS**.





Send a SOS: STEP 2

To confirm and send SOS, select **Right Arrow** (Yes). To cancel, select **Left Arrow** (No).

Note: If you do not confirm within 5 seconds, the SOS will time out and the SOS message will not be sent.

Cancel SOS: To Cancel the SOS, select **Left Arrow** from the Sending SOS screen.

Note: In SOS the SOS icon appears in the Status Bar, a red line will scroll across the bottom of the status bar and the device vibrates as SOS is sent.

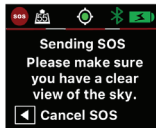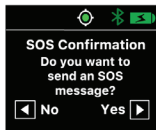

To send a Quick Msg:

1. From the **Main Screen**, press the **Left Arrow** key labeled **Quick Msg**.
2. From the **Quick Msg** menu, scroll to highlight the message you would like to send.
3. Once highlighted, press the **OK** key.
4. The device will vibrate twice, display **"Sending Message"** and the message.

